


# RECORDING INSTRUCTION WINTERGARTEN

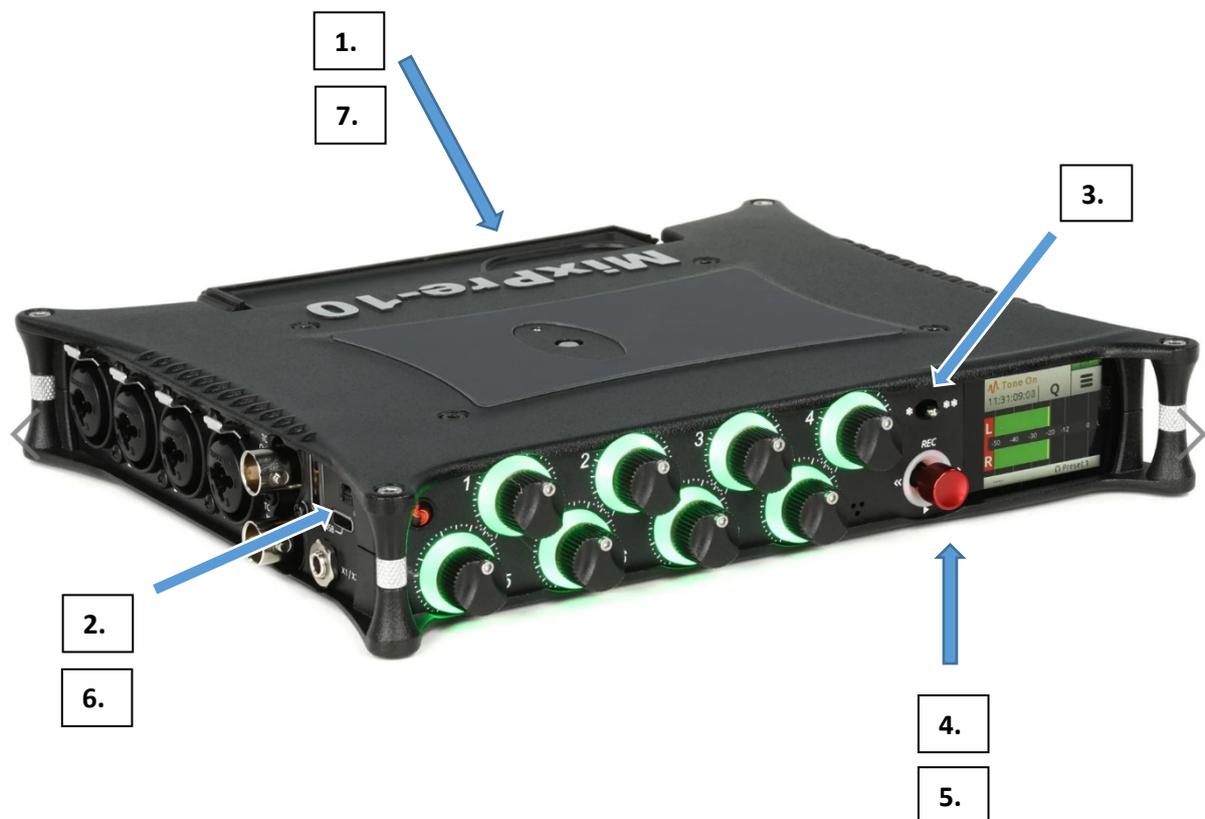

1. Insert a SD card on the back side
2. Switch ON the device on the left side (press ok on the touchscreen after the hint 'SD Card is not right formatted')
3. Push this button to the left [\*]  
On the touchscreen choose:  
Edit & format  
the SD card (confirm. Note: ALL DATA on the card will be deleted)
4. To START the RECORDING push UP the red button
5. To STOP push the red button
6. Switch OFF the device
7. Don't forget your SD card

Highly recommended: dim the lights to 100% or switch them OFF to avoid dimmer noise.